IC HOME


Quick Start Guide

Dinger Pro 3



IC REALTIME


Know Your Dinger Pro 3

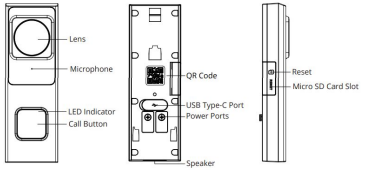

LED Indicator Status:

Solid Green: The device is operating normally, and the network is functioning properly.
Flashing Green Quickly: The device is connecting to the network or the Doorbell is ringing.
Flashing Green Slowly: The device is in network configuration mode or someone is answering the Doorbell call.
Flashing Green and Red: The device firmware is being upgraded.
Solid Red: The device is starting up or there is a device malfunction.
Flashing Red: The device is unable to connect to the network.

Package Contents

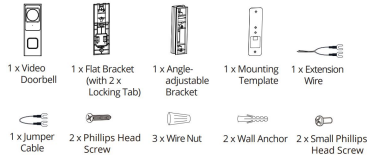

Add Doorbell to App

1. Connect the doorbell to the power supply via the USB Type-C wire and wait for the indicator light to turn on.

2. Download and install the IC View Core App. Open the App and register for a new account, then log in with your new credentials to begin.

Download on the App Store | GET IT ON Google Play

3. Use the App to scan the QR code on the doorbell. Follow the on-screen instructions to add and configure the devices. You can view the doorbell screen within the App.

Installation

Installation Position

Choose an appropriate installation location, ensuring that power supply is available and that the camera can cover the desired monitoring area. It is recommended to install at a height of 1.2 meters.

Note: If you are unsure about the installation location, you can power the doorbell and check the live view in the App. Choose a location where you can see the desired field of view. Once the doorbell can capture the desired field, you can proceed with the subsequent installation steps.


Shut off the Power

⚠ Please shut off the power at the circuit breaker before installation.


Installation Steps

Please refer to the following instructions to install the doorbell onto the wall. We provide an angle-adjustable bracket to help achieve a more complete view. You can choose to use the angle-adjustable bracket based on your needs.


Step 1 Stick the mounting template at the appropriate position on the wall. Make sure it is level. Then drill 5mm holes at the marked screw hole locations.

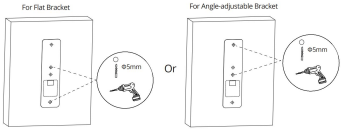


Step 2 Follow the mounting template to drill a wiring hole for the power supply wires. Make sure the length of this hole is at least 20mm. Then firmly tap the wall anchors into the pre-drilled holes using a hammer, ensuring they are flush with the wall surface.

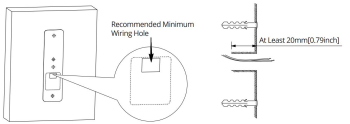


Step 3a If you choose the flat bracket installation:
Remove the two locking tabs from the flat bracket and keep them safely. Align the flat bracket with the installed wall anchors. Secure the bracket with the supplied screws.

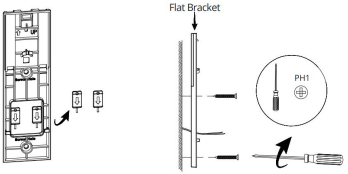


Step 3b If you choose the angle-adjustable bracket installation: Remove the two locking tabs from the flat bracket and keep them safely. Align the angle-adjustable bracket with the installed wall anchors and secure the bracket with the supplied screws. Then align the holes of the flat bracket with the holes of the angle-adjustable bracket and tighten the screws.

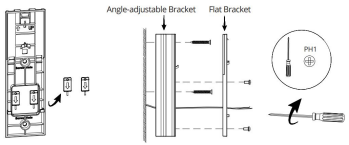


Step 4a If the length of the power supply wires is sufficient: Connect the wires to the terminals on the back of the doorbell, then tighten the terminal screws.

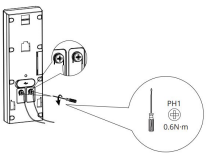

Step 4b If the power supply wires are too short: Use wire nuts to connect the extension wires and power supply wires. Connect the wires to the terminals on the back of the doorbell, then tighten the terminal screws.

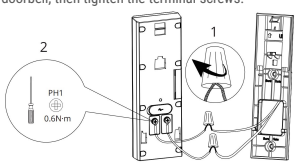

Step 5 Slide the doorbell from top to bottom to secure it onto the bracket to finish the installation.

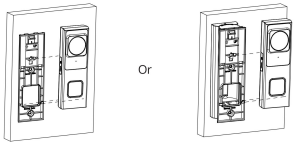


Bypass the Existing Chime

This doorbell is not compatible with mechanical chimes or electronic chimes. If you already installed an existing one, you need to use the jumper cable in packing list to passby the existing chime.

1. Remove the chime's cover to expose the terminal connections. Loosen the terminal screws labeled with "FRONT" and "TRANS".

2. Connect either end of the jumper cable to the "FRONT" terminal and the other end to the "TRANS" terminal, then tighten the screws to secure the jumper cable in place.

3. After connecting the jumper cable, put the cover back on the chime.

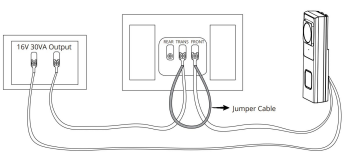


Restore the Power

⚠Turn on the power at the circuit breaker after the installation is complete.


Angle Adjustment

If you need to adjust the view angle of the doorbell, use a screwdriver to loosen the screws at the bottom of the angle-adjustable bracket, adjust it to the appropriate angle (Maximum 40° to the left and right) by checking the field of view on the App, and then tighten the screws.

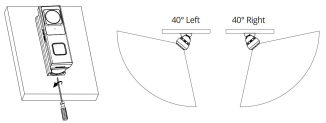


Lock/Unlock the Doorbell


Lock: Insert a locking tab into the gap between the top of the flat bracket and the wall (or angle-adjustable bracket).

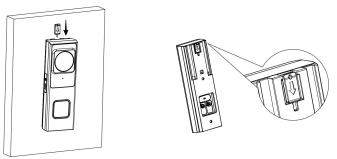

Unlock: Insert the cylindrical end of another locking tab into the hole of the previous locking tab, then applying upward force to lift the previous one.

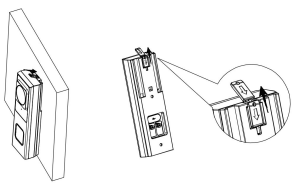


After taking off the locking tab, you can slide the doorbell from bottom to top to remove the doorbell from the flat bracket.

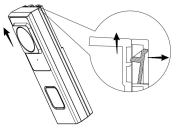

SD Card Cover Removal and Installation

Removal: Remove the SD Cover from the Doorbell. So that you can remove/install the SD card or press the RESET button for 5 seconds to reset the Doorbell.

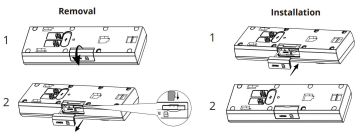

⚠**Installation:** Install the SD cover to the Doorbell. Ensure that the safety rope of the cover is fully retracted and that the cover is installed properly without any protrusions; otherwise it will affect the waterproof performance of the doorbell.

Why isn't the video doorbell turning on?

- Make sure the doorbell power breaker is on. Wait about 5 minutes for it to power up.
- Check that the power source is 14–24 VAC/10–24 VDC, 1.0A. You can find this on the doorbell transformer label or test it using a multimeter.
- If using a USB power cable (not included), make sure it's plugged into a 5V, 2A USB adapter (also not included).